

## Updating your Cyrus ONE

### You will need:

- USB to mini-USB lead
- Windows PC or Mac computer
- The latest Cyrus Updater file to match your type of computer (Windows / Mac)

**Please follow the procedure below to update the firmware in your Cyrus ONE. The Updater file must be unzipped and saved to your computer prior to attempting the firmware update.**

Your Cyrus ONE should be initially connected to mains power but switched off. No sources, speakers, or other electronic equipment should be connected to the amp.

- Connect one end of the USB cable to your computer, and then the other end of the USB cable to the mini-USB on the rear panel labelled 'Upgrade', as circled below



- Press the power switch on Cyrus ONE then wait 10 seconds
- Run the Updater file you downloaded earlier

- **With Windows** - During the process, you will be prompted to 'Press any key to continue'.  
- **With Mac** - Select 'Quit' once a 'Drive unmount was successful' message is displayed

- Press the power switch on Cyrus ONE
- Remove the mini-USB cable from Cyrus ONE, and then from your computer

It is recommended to perform a full factory reset after updating the firmware, as explained below:

### Factory resetting Cyrus ONE

- Connect mains power and press the power switch
- Spin the volume control anti-clockwise repeatedly, until the LEDs display the installed firmware version (for instance, 2.0 will display two LEDs around the source control and none around the volume). The amp will now reboot and the factory reset is complete.