

Important! Read before operating this equipment!

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Clean only with a dry cloth.
- Install in accordance with the manufacturer's instructions.
- Refer all servicing to qualified service personnel.
- There are no user-serviceable parts.
- Do not place the product in continuous sunlight or near naked flames.
- Check local regulations concerning the use of mobile phones when driving before using the soundBuds in a car.
- Exercise caution when using soundBuds in a manner that may cause danger to you if you cannot clearly hear your surroundings.
- Never use the soundBuds in areas where radio devices are not permitted.
- Batteries (a battery pack or installed batteries) shall not be subject to excessive heat such as sunshine, fire or the like.
- Do not service the internal battery. Have it examined (and replaced if needed) by a competent service centre.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.



Specification

- Earphones**
- Bluetooth** **Bluetooth** V5.0, A2DP, HFP, HSP, AVRCP, SPP
 - Power output 5mW/ch
 - Frequency range 20-20kHz
 - s/n ratio >70dB
 - Battery 50mAh
 - Charge time 1.5 hours
 - Weight 2 x 4.1g
- Charging case**
- Battery 500mAh
 - Charge time 2 hours
 - Weight 36g


Legal notices

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Cyrus is under license. Other trademarks and trade names are those of their respective owners.

Cyrus Audio

Cyrus Audio is an internationally-acclaimed high-end audio company in Cambridgeshire, England. If you would like to learn more about our range, our design philosophies and our unique technologies, then visit us at www.cyrusaudio.com.

Key

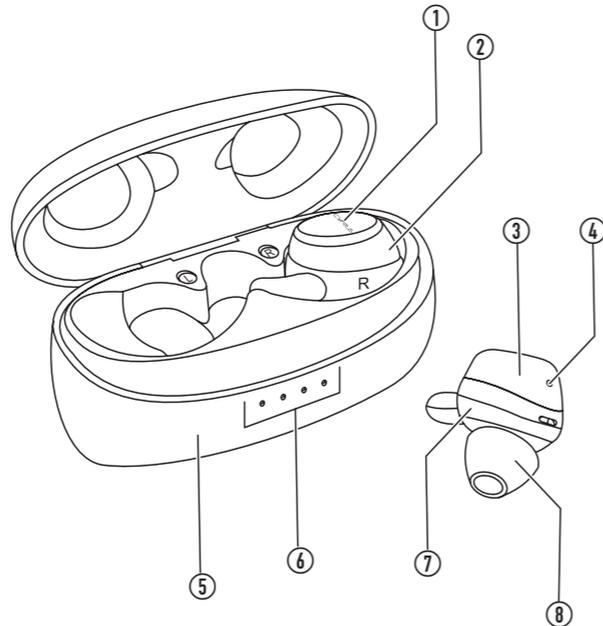

1. Touch control
2. Right soundBud
3. Left soundBud
4. Indicator/Microphone
5. Charging case
6. Charge level indicators
7. Fitting band
8. In-ear tip

Changing the soundBud in-ear tips

- Refer also to overleaf.
1. The in-ear tips are a push fit on the soundBuds. Gently pull the in-ear tip from the soundBud.
 2. Select a size and push the new in-ear tip onto the soundBud.
 3. Ensure that the in-ear tip is seated on the soundBud correctly.

Changing the soundBud fitting bands

- Refer also to overleaf.
- The soundBuds are supplied with removable bands for additional comfort (leisure band) and fixing security (sports band). The sports bands include an additional hook for security during sporting activities.
- To change the bands, gently remove the band fitted to the soundBud and fit the new band over the soundBud body.
- Left and right bands are different. Each band is marked L (left) or R (right). Ensure that the correct band is fitted to each soundBud.*
- NOTE: The bands include a location hole of this shape . Ensure that this location hole is fitted correctly on the peg on the soundBud.

Operation

- Fitting the soundBuds in your ears**
- Refer also to overleaf.
- Unpack the left and right soundBuds from the charging case.
 - Fit each of them in your ears as shown.
 - Check the fit. The in-ear tip should provide a comfortable 'seal' in your ear. If they are too tight or too loose in your ear to be a comfortable fit, try one of the alternative in-ear tips.
- Audio performance can suffer if the fit is not correct.

Stereo listening

- For first time use -
- Remove the soundBuds from the charging case.
 - The soundBuds will automatically power on.*
 - The left soundBud will pulse green and the right will flash red/green.*
 - Turn on the mobile's **Bluetooth** function to search for a new device.
 - Select 'Cyrus SoundBuds'.
 - After successful connection, both soundBuds will pulse green. You can now listen to music or make phone calls.*

In regular use -

- Remove the soundBuds from the charging case.
- The soundBuds will automatically power on and connect to the last source (when available).*

Using a single soundBud


- The left soundBud can be used alone to make hands-free phone calls.
- Remove the left soundBud from the charging case.
 - The left soundBud will connect to the mobile phone.*
 - After successful connection, you can make hands-free phone calls using just the left soundBud.*

Charging the soundBuds

- The charging case includes a storage battery. When charge is available in the charging case the soundBuds will re-charge when placed in the charging case.
- Refer also to overleaf.
- Open the lid.
 - Place the soundBuds into the case.
 - Close the lid.
 - The soundBuds will charge. When the soundBuds are charging the indicators on the case will light.*
 - When charging is complete the indicators will switch off.*

Charge level indication

- The charge level of the soundBuds is sent to the connected mobile device for display, usually on the Bluetooth settings screen.
- NOTE: Not all mobile devices will support charge level display.
- The charging case includes display of charge level. The four indicators on the charging case show the level of charge.

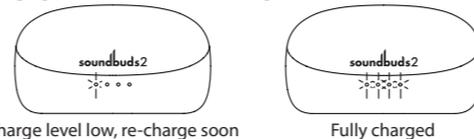

Charging the charging case

- If the charge level indicators do not light when the soundBuds are placed in the charging case, then there is no power remaining in the charging case and it should be charged.
- The charging case can be charged whether the soundBuds are in the case or not.
- Connect the charging cable (supplied) to the inlet on the back of the charging case.
 - Connect the USB plug on the charging cable to a USB outlet on a computer or a USB charger.
 - When the case is fully charged all four indicators will light steadily.*
- NOTE: A USB charger will generally give a quicker charge time than a computer USB port.

Multi-Function touch controls

The soundBud functions are controlled by touching the Cyrus logo on the back of the soundBud. The multi-function controls are used for music track navigation, volume control, answering phone calls and for access to voice assistant services on a connected mobile.

		Function	Action
Music		Play/Pause	Touch left or right once
		Previous track	Touch left twice
		Next track	Touch right twice
		Reduce volume	Hold left for 2 seconds
		Increase volume	Hold right for 2 seconds
Phone		Receiving a phone call	Touch left or right once
		Ending a call	Touch left or right once
		Rejecting a call	Touch left or right twice
Standby		Switch on manually	Hold left and right for 2 seconds
		Switch off manually	Hold left and right for 8 seconds
Control		Mobile voice assistant	Touch left or right three times

Troubleshooting

- The soundBuds will not switch on.**
- The batteries may be discharged. Re-charge them according to the charging instructions.
- Unable to pair.**
- Place the soundBuds next to your mobile device. Check that all devices are switched on. Check that the **Bluetooth** function is enabled on your mobile device.
- The battery in the charging case does not charge.**
- If you are charging from a computer, check that it is switched on and not in standby mode.
 - Check that the cable is properly connected to both the charging case and the computer/charger.
- The soundBud batteries are not charging**
- Check that the charging case is charged.
 - Check that the earphones are positioned correctly in the charging case with their contacts mating with the charging pins in the case.
 - Check that the lid of the charging case is properly closed.
- No sound or poor quality sound**
- Check that the **Bluetooth** mobile device is connected to the soundBuds.
 - Check that the volume is turned up on the connected **Bluetooth** device.
 - Make sure that the **Bluetooth** device is in within reception range of the soundBuds.
 - Disconnect the **Bluetooth** device from the soundBuds and check it is playing sound correctly.
 - Make sure that no other **Bluetooth** device is disrupting your **Bluetooth** connection.
 - Try an alternative in-ear tip size to ensure a good "seal" of the soundbuds within your ear.

Warranty

- The warranty period is one year.
- Please retain the sales receipt as proof of purchase.
- Warranty claims must wherever possible be made through the retailer from whom the equipment was purchased.
- This warranty excludes:
- Damage caused through neglect, accident, misuse, wear and tear, or through incorrect installation, adjustment or repair by unauthorised personnel. Any unauthorised servicing will result in loss of warranty.
 - Liability for damage or loss occurring in transit to or from the purchaser.
 - Consequential damage, loss or injury, arising from or in conjunction with this equipment.

Equipment for attention under warranty should be consigned return carriage paid. If returned equipment is found to comply with the published specification, CYRUS reserves the right to raise a charge.

The above conditions do not affect your statutory rights as a consumer.

WEEE






- This logo means that this product is not to be disposed of with your household waste. This product should be handed over to a designated collection point to be recycled. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information on collection points, contact your disposal service or City Council.




CYRUS

soundbuds2

User Guide

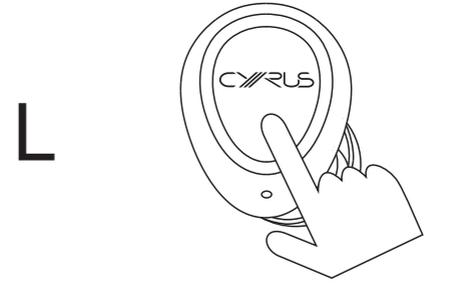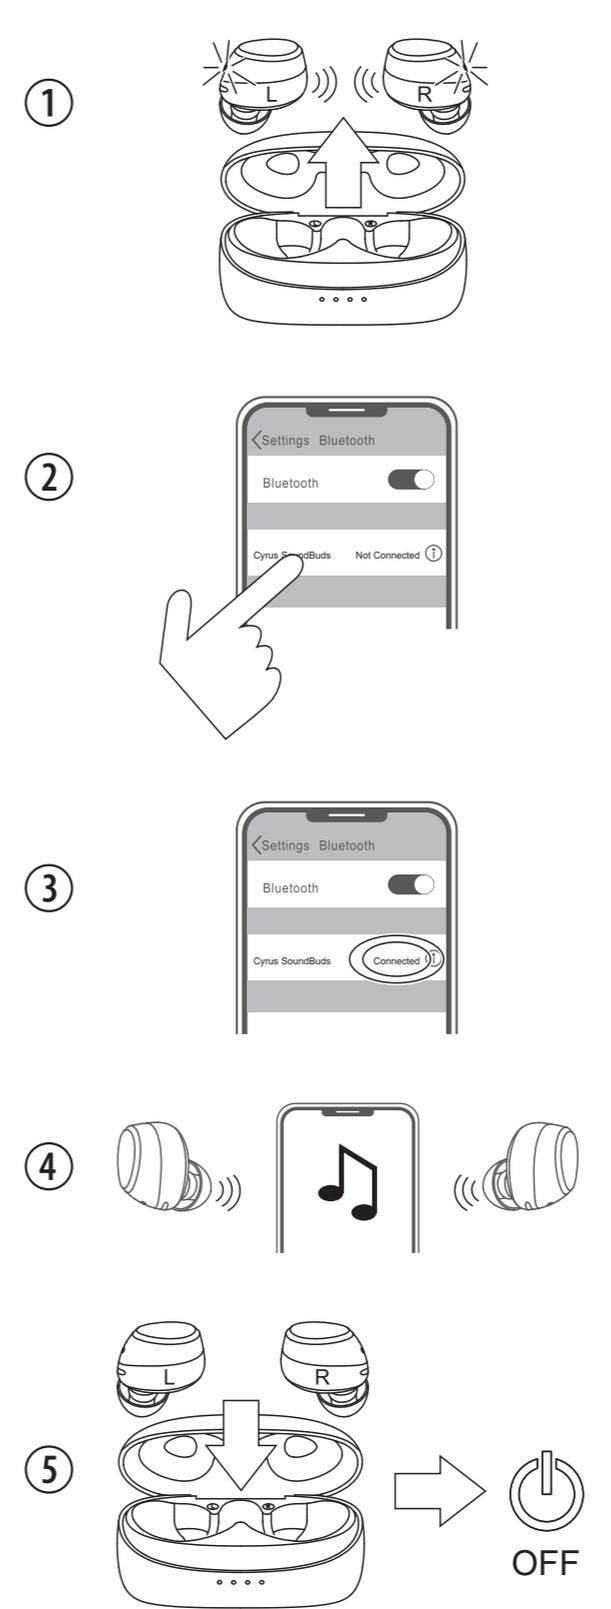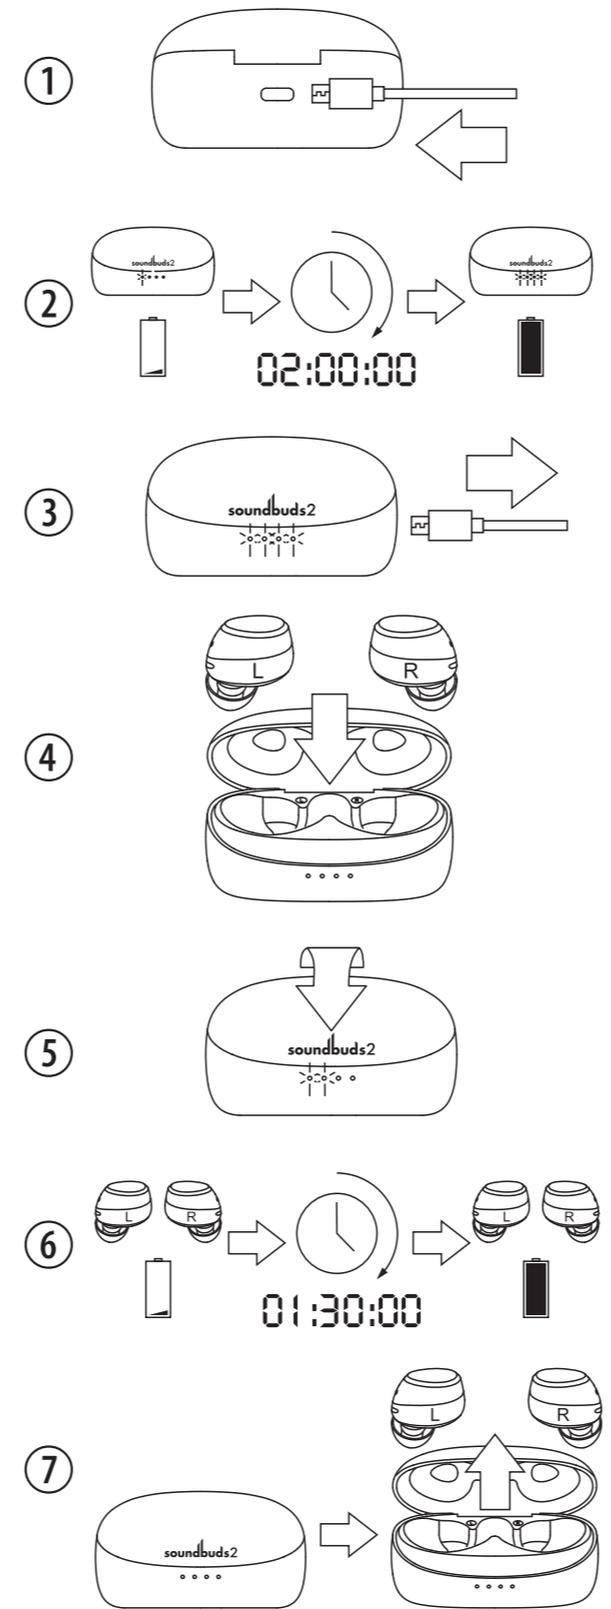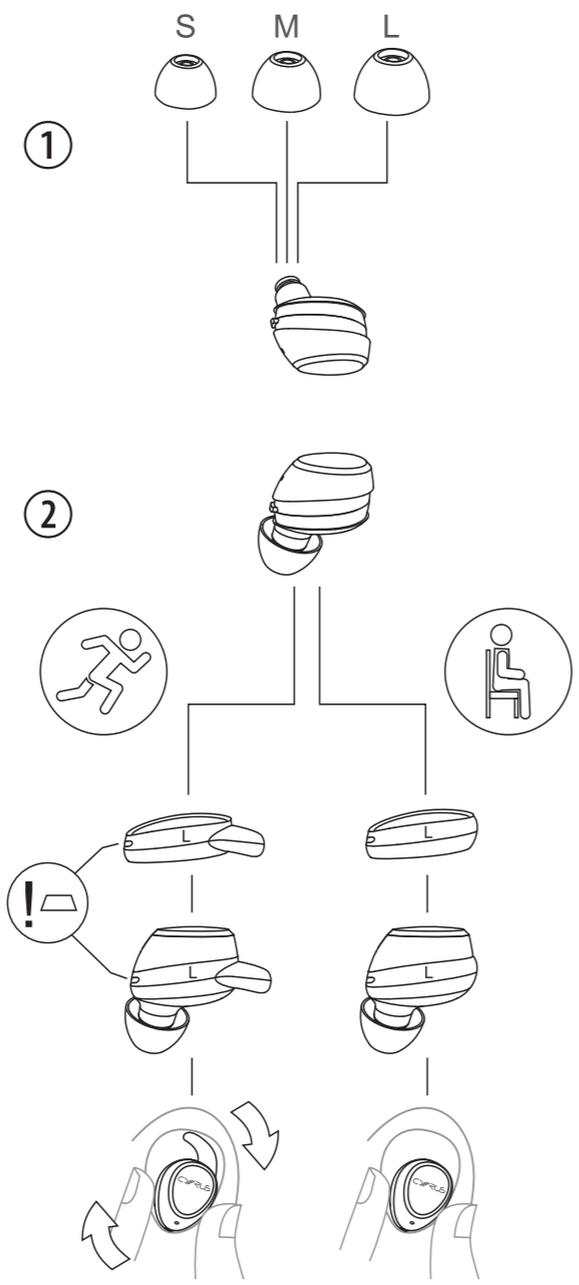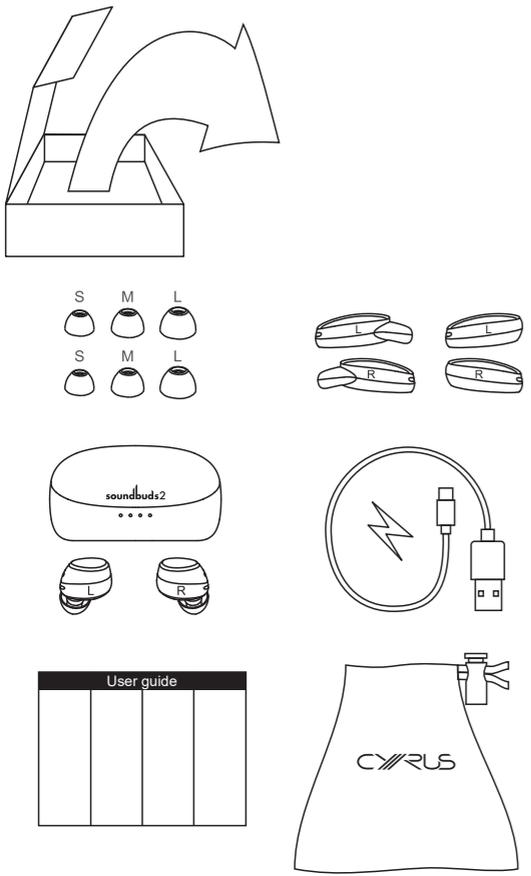

Music	Play/Pause	Touch x1
	Next	Touch x2
	Volume Down	Touch 00:02
Phone	Answer	Touch x1
	End Call	Touch x1
	Reject	Touch x2
Phone	Bluetooth	Touch x3
Power	ON	Touch 00:02
	OFF	Touch 00:08

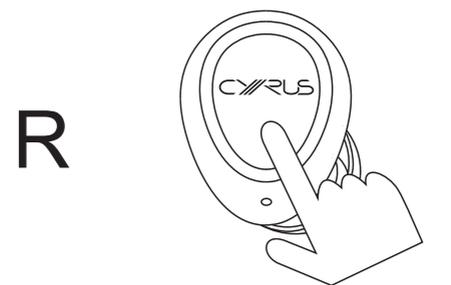

Music	Play/Pause	Touch x1
	Next	Touch x2
	Volume Up	Touch 00:02
Phone	Answer	Touch x1
	End Call	Touch x1
	Reject	Touch x2
Phone	Bluetooth	Touch x3
Power	ON	Touch 00:02
	OFF	Touch 00:08