

Cyrus System Navigator

User Instructions

System Navigator Compatibility

The *System Navigator* remote control handset will send commands to Cyrus DVD players, Surround decoders, Stereo amplifiers, CD players, and Tuners. You can therefore build a two channel or multi-channel *Cyrus* system and control all primary functions with one handset.

Compatible products (at the time of publishing)

DVD players..... Cyrus DVD8, Cyrus DVD7+, Cyrus DVD7.

Surround decoders Cyrus AV8, Cyrus AV5 (original AV Preamplifier handset required for decoder configuration).

Stereo amplifiers..... Cyrus 8, Cyrus 7, Cyrus 6, Cyrus 5, Cyrus aCA7, Cyrus aCA7.5, Cyrus IIIi.

CD players Cyrus CD7, Cyrus dAD3, Cyrus dAD1, Cyrus dAD1.5, Cyrus dAD7, Cyrus Discmaster/Dacmaster.


FM tuners..... Cyrus FM7.5, Cyrus FM7 (The *System Navigator* will store and recall up to 29 presets in an FM tuner.

Press STORE followed by the preset location numbers to store each preset).

Power Control and Selecting System Components

The yellow system select keys are used to select which part of your system you want to control and to turn on the power for the correct components. The *System Navigator* retains this setting until it is next changed.

- Press AV/DVD to set the handset to AV/DVD mode and switch on a DVD player and/or surround decoder. This key will also switch on a Cyrus stereo amplifier (when used) and select the AV/VI input. The *System Navigator* is now set to send commands to DVD players and Surround decoders.
- Press CD to set the handset to CD mode and switch on the CD player and a stereo amplifier. This key will also select the correct CD input of a stereo amplifier. The *System Navigator* is now set to send commands to CD players and stereo amplifiers.
- Press TUNER to set the handset to TUNER mode and switch on an FM tuner and a stereo amplifier. This key will also select the correct TU input of a stereo amplifier. The *System Navigator* is now set to send commands to Tuners and stereo amplifiers.
- Press AMP to set the handset to AMPLIFIER mode and switch on a stereo amplifier only. The last used input will remain selected. Choosing this mode will activate only the keys of the *System Navigator* which send commands to stereo amplifiers.

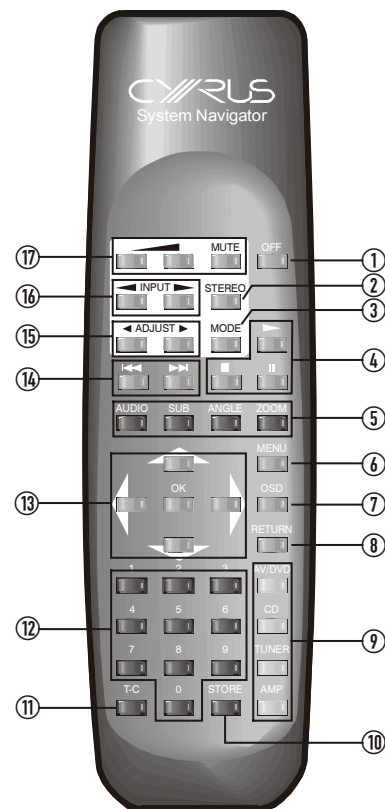

		AV/DVD MODE	CD MODE	TUNER MODE	AMP MODE
1	OFF	Switches all products off.	Switches all products off.	Switches all products off.	Switches all products off.
2	STEREO	Stereo mode selection for a surround decoder.	No function.	Switch Stereo/Mono mode for Tuner.	No function.
3	MODE	Selects mode functions for a surround decoder.	Amplifier balance select.	Amplifier balance select.	Amplifier balance select.
4	PLAY/PAUSE/STOP	DVD playback control keys.	CD playback control keys.	No function.	No function.
5	AUDIO/SUB/ANGLE/ZOOM	Quick access to DVD menu functions.	No function.	No function.	No function.
6	MENU	DVD disc menu select.	No function.	No function.	No function.
7	OSD	DVD set-up menu quick access.	No function.	No function.	No function.
8	RETURN	No function.	No function.	No function.	No function.
9	MODE SELECT	Selects AV/DVD mode. Switches on AV & DVD. Selects amplifier AV input.	Selects CD mode. Switches on CD. Selects amplifier CD input.	Selects TUNER mode. Switches on tuner. Selects amplifier TU input.	Selects AMP mode. Switches on amplifier.
10	STORE	No function.	Store tracks in memory.	Stores presets.	No function.
11	T-C	Title/Chapter selection for DVD.	No function.	No function.	No function.
12	NUMERIC KEYPAD	Direct access numeric keypad for DVD.	Direct access track/memory selection.	Preset selection.	No function.
13	NAVIGATION KEYS	DVD menu navigation.	Left/right keys are for FF/Rew search.	Left/right keys are for Scan up/down.	No function.
14	SCAN KEYS	Next/Previous selection for DVD, Hold for FF/Rew scan.	Next/previous selection for CD players.	Next/previous preset selection.	No function.
15	ADJUST	For selecting mode menu options of a surround decoder.	No function.	No function.	No function.
16	INPUT	Selects the input of a surround decoder.	Selects the input of a stereo amplifier.	Selects the input of a stereo amplifier.	Selects the input of a stereo amplifier.
17	VOLUME & MUTE	Sets or mutes the volume of a surround decoder.	Sets or mutes the volume of a stereo amplifier.	Sets or mutes the volume of a stereo amplifier.	Sets or mutes the volume of a stereo amplifier.